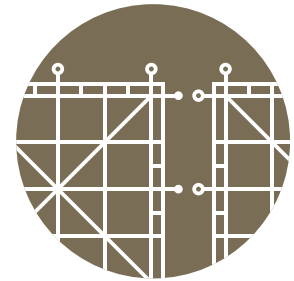


HEDGE MAT

Assembly & Installation Instructions

Assembly (No Tools Required)

1. Observe the direction of the foliage
 - Boxwood & Fern: Multi directional
 - Ivy & Lavender: Follow direction of foliage
2. Connect panels together using the easy snap-to-lock system.
3. For simple and quick installation, form strips 2 panels wide by the desired height.


**Snap-to-Lock****Installation**

For simple and quick installation, form strips 2 panels wide by the desired height

Chain Link, Wire Mesh & Wrought Iron


Tools: Green zip ties (Included)

1. Fasten the first panel or connected set of panels directly to the support.
2. Repeat progressing laterally (clip panel sections together before fastening to the support for a perfect fit.)

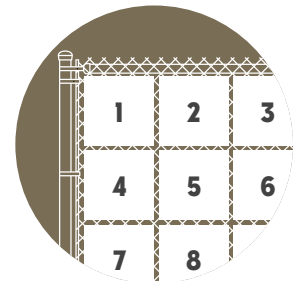**Direct to Support****Drywall & Wood**

Tools: 1/2 in. x 1/2 in. Crown 20 Gauge Staples & Stapler (sold separately)


1. Fasten the first panel or connected set of panels directly to the top of the wall or service. Use additional staples on the top panel in each column hung.
2. Place 2 staples on the edges of each panel making your way down to the bottom panel.
3. Repeat progressing laterally (clip panel sections together before fastening to the support for a perfect fit.)

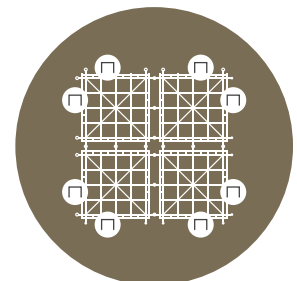**Drywall & Wood**

Concrete, Brick, or Block

Tools: 3/16 in. x 1 3/4 in. Washer Head Concrete Screw Anchors, drill bit & drill (sold separately)

1. Starting at the top of the wall or surface hold a single panel in place. Using your drill and drill bit, drill one hole in the top left & right square holes found on the backing grid of the panel. Drill each hole approximately 1/4 inch deeper than the anchor screw being used.
2. Screw a washer head concrete anchor in each hole securing the panel to the surface.
3. Repeat processing downward till a single column is complete ensuring the panels are securely fastened as you progress.
4. Repeat steps 1 - 3 until your installation is complete.

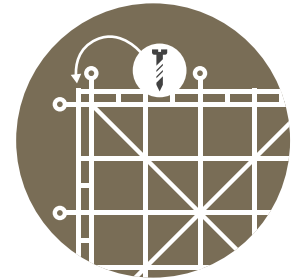


Screw in Corners

Metal & Aluminum

Tools: 3/4 in. Truss Head Self-Tapping Screws & drill (sold separately)

1. Starting at the top of the wall or surface hold a single panel in place. Using your drill and 3/4 inch self-tapping screws, place a screw in the top left & right square holes found on the backing grid of the panel.
2. Repeat processing downward till a single column is complete ensuring the panels are securely fastened as you progress.
3. Repeat steps 1 & 2 till your installation is complete.

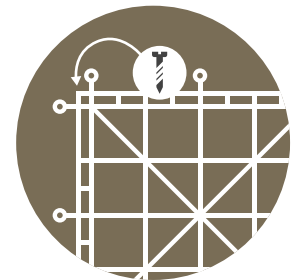

Screw in Corners


HEDGE ROLL

Installation Instructions

Most Surfaces

Tools: 1/2 in. x 1/2 in. Crown 20 Gauge Staples & Stapler (sold separately)
Washer Head Screws, drill bit & drill (sold separately)
Fence Fasteners (Included)

1. Unroll Hedge and affix to desired surface using staples, screws, or provided Fence Fasteners.

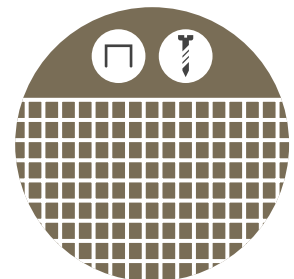

Affix to Surface

EXPANDABLE LATTICE

Installation Instructions


Most Surfaces

Tools: Screws appropriate for surface, drill bit & drill (sold separately)

Nails, hammer (sold separately)

Fence Fasteners (Included)

1. Expand lattice to desired size.
2. Attach screw or nails to surface in line with corners of lattice. Additional support may be necessary depending on specific conditions such as high winds or extreme weather.
2. Hang lattice from supports.

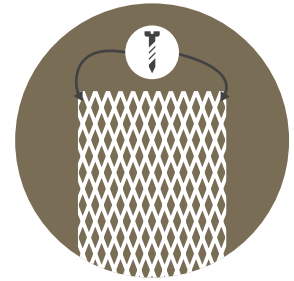

Hang from Corners